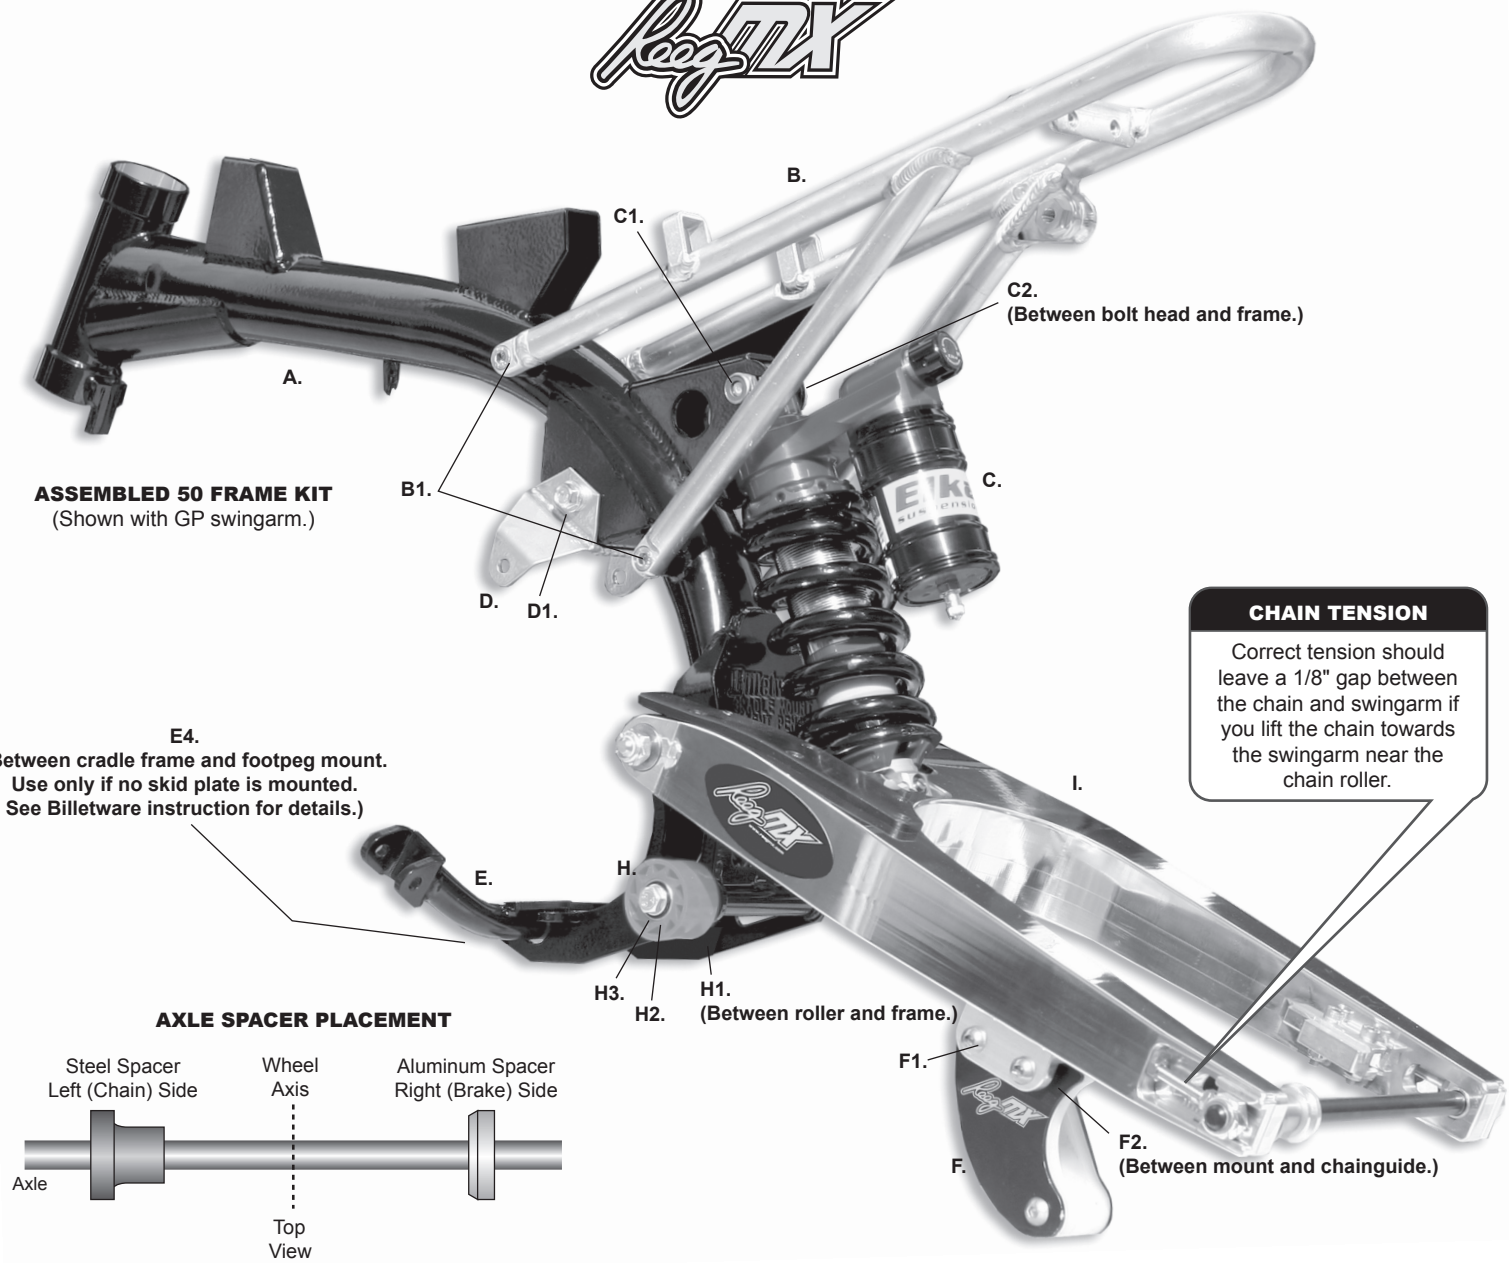

ASSEMBLED 50 FRAME KIT
(Shown with GP swingarm.)

CHAIN TENSION

Correct tension should leave a 1/8" gap between the chain and swingarm if you lift the chain towards the swingarm near the chain roller.

AXLE SPACER PLACEMENT

KIT CONTENTS

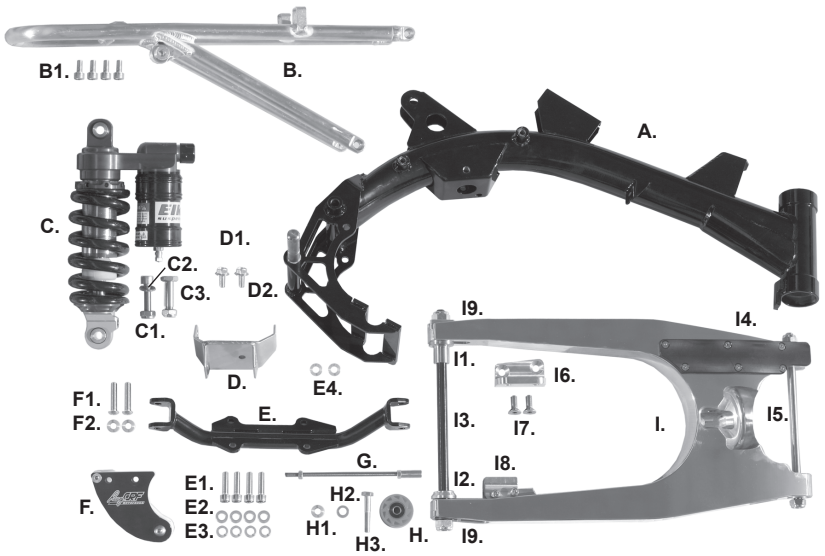

- A) Chromoly Frame
- B) Subframe
  - B1: Subframe Hardware
- C) Elka Shock
  - C1: Upper Shock Bolt (Cap Head)
  - C2: Upper Shock Washer
  - C3: Lower Shock Bolt (Hex Head)
- D) Motor Mount
  - D1: Mtr Mnt Bolts (2)
- E) Chromoly Footpeg Mount
  - E1: Ftpg Mnt Bolts (4)
  - E2: Ftpg Mnt Washers (4)
  - E3: Ftpg Mnt Lock Washers (4)
  - E4: Ftpg Mnt Spacers (2)
- F) Chainguide
  - F1: Chainguide Bolts (2)
  - F2: Chainguide Aluminum Spacers (2)
- G) Chainguide Extension
- H) Chain Roller
  - H1: Roller Aluminum Spacer
  - H2: Roller Washer
  - H3: Roller Bolt
- I) Swingarm
  - I1: Steel Wheel Spacer (Left "Chain" Side)
  - I2: Aluminum Wheel Spacer (Right "Brake" Side)
  - I3: Chromoly Axle
  - I4: Chainguard
  - I5: Pivot Bolt
  - I6: Chainguide Mount
  - I7: Chainguide Mount Bolts (2)
  - I8: Anti-Spin Bracket
  - I9: Pinch Bolt (2)